

Typical Cable Installation Diagram for Models 2016, 2017, 2019

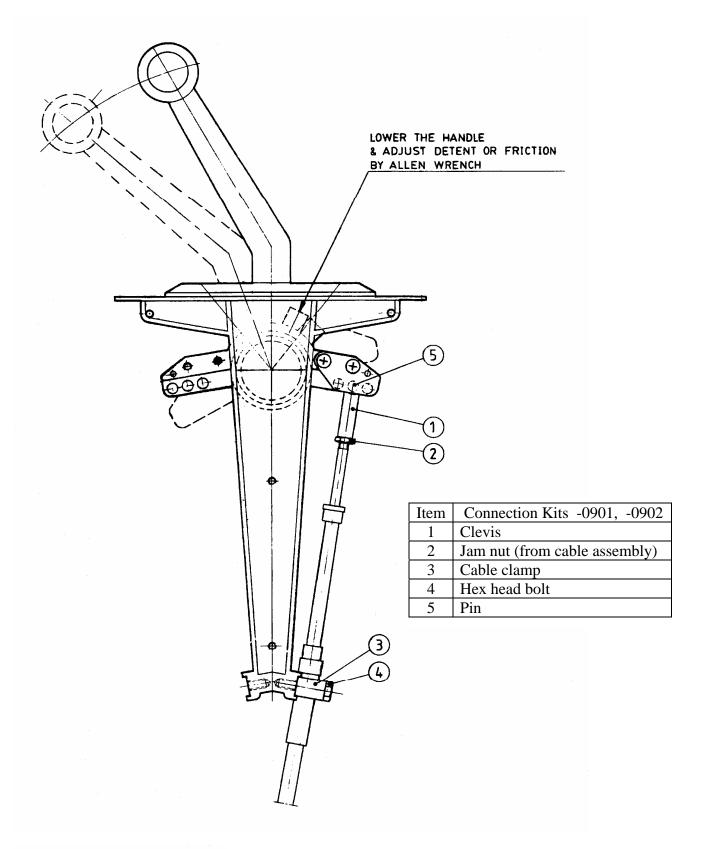



Engine - Control Head Connection Arrangement

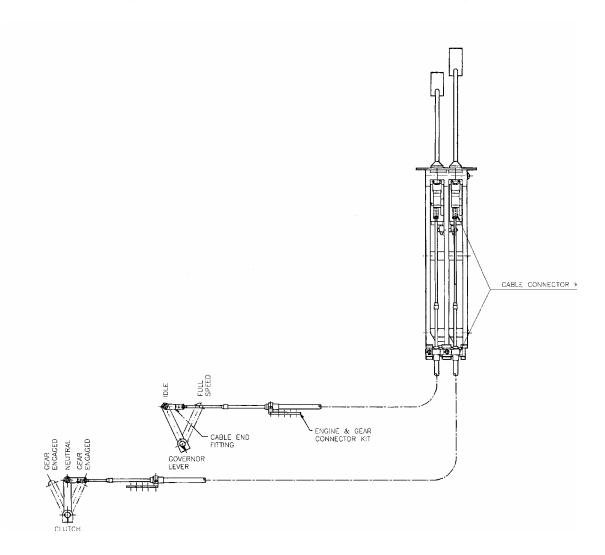

Recommended connection cables: Felsted cables 30 series or 40 series.

In order to provide a satisfactory push-pull control system, the following points must be observed:

- 1. Control head must be installed on a flat and clean surface to avoid binding in the bearing sections.
- 2. When attaching the cable to the control head or the engine, it is important not to twist the inner core of the control cable as this will cause additional friction.
- 3. the cables must be routed in a manner to have as few bends as possible and also to avoid sharp bends.
- Ensure that all fasteners are tightened. For installations subject to severe vibration, secure screws with thread securing compounds like "Loctite™" or similar.
- 5. Lubricate bearings and other moving parts with all purpose grease occasionally.

